

Blade carbon infrared heater

DESCRIPTION


The Blade carbon infrared heater is a beautifully designed and modern wall mounted heater which can be operated in two ways – via a switch on the heater or remote control.

APPLICATION

Suited for indoor and outdoor areas such as terraces, cafes, balconies, apartments, houses, workshops, restaurants and bars.



SPECIFICATIONS

Voltage	230 - 240V
Power	1800 - 2000W
Current	8.7A
Dimensions	900 (w) x 130 (h) x 90(d) mm
Weight	2.2 kg
IP Rating	IP55

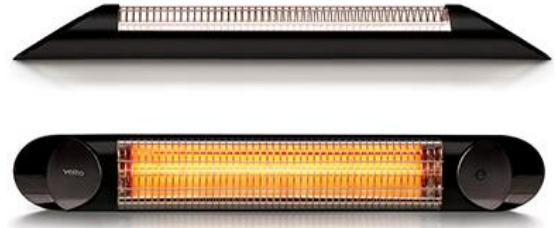

IMPORTANT SAFETY INSTRUCTIONS – READ ALL INSTRUCTIONS BEFORE INSTALLING AND USING THIS HEATER

- The heater must be installed at least 1.8m above the floor.
- There must be a minimum distance of 0.5m between the heater and the ceiling.
- The distance of your heater from the corners should be minimum 0.5m
- Do not cover your heater and do not hang any clothing over the heater. Do not place any clothing on or near the heater.
- This heater is designed for use on a 230 – 240V AC supply.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.
- This heater is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The fireguard of this heater is intended to prevent direct access to heating elements and must be in place when the heater is in use.
- The fireguard does not give full protection for young children and infirm persons.
- This heater must be earthed. Connect to properly grounded outlets only.
- Ensure both plug and socket is clean and free from dust when using.
- To disconnect the heater from the power supply, turn the controls off, grip the plug and pull from the power socket. Never pull by the cord.
- Never touch the plug with wet or moist hands.
- **Do not use an extension cord with this heater** unless connected via a RCD device.
- Regularly inspect the power cord and plug for wear or damage. In order to avoid a hazard, do not operate the heater with a damaged cord, plug or loose socket or after the heater malfunctions or has been dropped or damaged in any manner.
- Do not use the heater if the heating element is cracked or broken.
- The heater must not be installed close to curtains and other combustible materials.
- The heater must not be located immediately below or in front of a socket outlet.

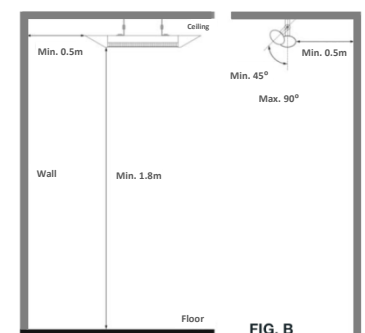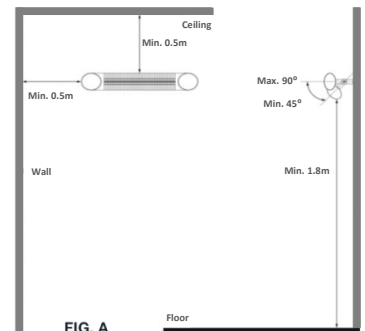

INSTALLATION

- **The heater should be installed by a registered electrician** if being hardwired.
- Always disconnect the heater from the electricity supply and allow it to cool before installation.
- This heater **can be mounted either** horizontally or vertically.
- The lowest part of the heater must be located at or above a minimum height of 1.8m from ground level, so that the heater cannot be touched when in operation.
- When mounting horizontally do not position the heater at an angle more than 90° and less than 45°.
- The **supply cable must be at the lower end of the heater** if the heater is installed at an angle or vertically.
- Keep the supply cord away from the body of the heater which will get hot during use.
- Do not use the heater on a flammable surface.
- Observe the minimum safe distance between the heater body and flammable surfaces when mounting.
- The heater should always have a minimum clearance of 0.5m from a ceiling and adjacent walls.
- If the heater is to be used outside, a weatherproof outlet is recommended.
- Before drilling ensure that there are no wires or water pipes in the area where the heater is to be installed.
- The heater must be installed on the mounting brackets provided.
- Fasten the brackets securely to the mounting surface and the backside of the heater using the nuts and screws supplied.
- Fasten the heater securely on the brackets using the nuts and bolts supplied.
- The brackets can be used to adjust the direction of the heater. Adjust the heater angle by loosening the two bolts on the wall mounting bracket. Tighten the bolts again when the desired angle is reached.
- For installation, a disconnecting/isolation switch incorporated in the fixed wiring (in accordance with the wiring rules) is to be provided.

OPERATING INSTRUCTIONS

Press the power button to turn the heater on.

Press the level button and change the power setting by pressing the arrow buttons.

Press the auto button then set the desired temperature by pressing the arrow buttons.

Press the timer button then set the sleep timer by pressing the arrow buttons.

Press the power button to turn the heater off.

You can also use the button on the unit to operate the heater.

REPLACING THE BATTERY

- Press the battery compartment release button and then slide out the battery tray. Remove the old battery and put the new battery in, ensuring that the battery's positive side is facing up. Use only a CR2025 battery in this remote control.
- Slide the battery tray back into the remote control until it clicks.
- Note: Do not allow water or liquid to get into the remote control.

CLEANING AND MAINTENANCE

- Always disconnect the heater from the electricity supply and allow it to cool before attempting to work on it.
- If the heater has collected dust or dirt inside the unit or around the heating element, have the unit cleaned by a qualified service agent. Do not operate the heater in this condition.
- The only maintenance required is cleaning of the external surfaces of the heater.
- Do not use powerful abrasive or solvent cleaning fluids when cleaning the heater as they may damage the plastic parts. Use a damp cloth to wipe the outside of the heater.
- If removed from its mounting position when not in use, store the heater carefully in a safe, dry, childproof location.
- Do not touch the heating element with bare fingers, as residue from your hand could affect the life of the lamp. If it is accidentally touched, remove the finger marks with a soft cloth moistened with methylated spirit or alcohol.
- Do not attempt to repair or adjust any electrical or mechanical functions on this heater.
- The heater contains no user serviceable parts. Should the product suffer damage or breakdown, it must be returned to the supplier.
- Damaged supply cords to be replaced by the supplier.

WARRANTY : 2 YEARS

New Zealand : T 0800 805 558 E info@tbw.co.nz W www.tbw.co.nz

Australia: T 1300 621 151 E info@formebathroomcollection.com.au W www.formebathroomcollection.com.au